

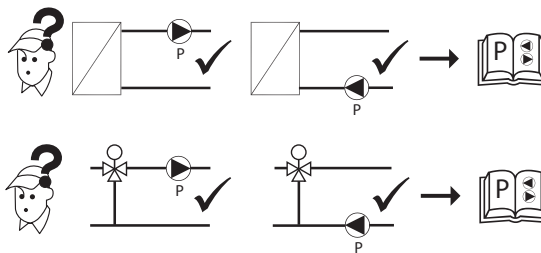 
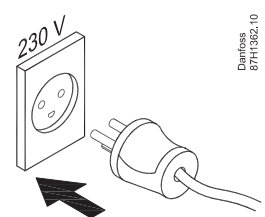 
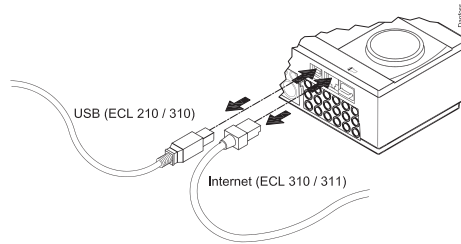 


Installation Guide

# ECL Comfort 210 / 296 / 310, A230 (code no. 087H3802) (A230.1, A230.2, A230.3, A230.4, A230.5)

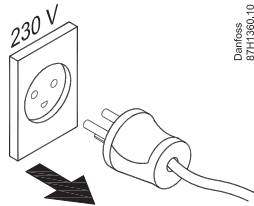 


## A230.1 ex. a

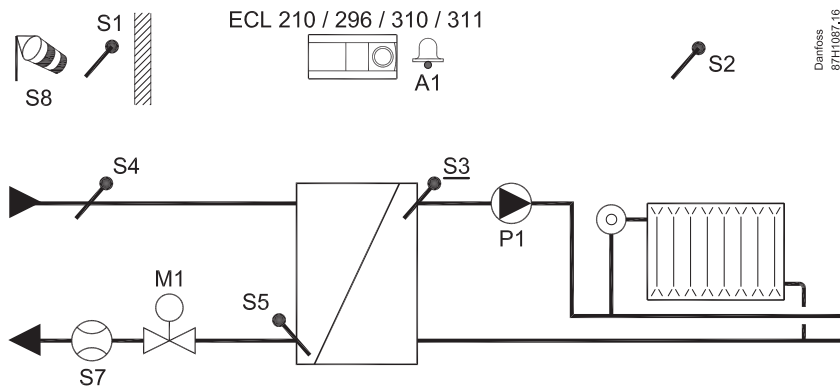


ECL 310 + ECA 32: M1 = 0 - 10 V


A230.1 ex. b:

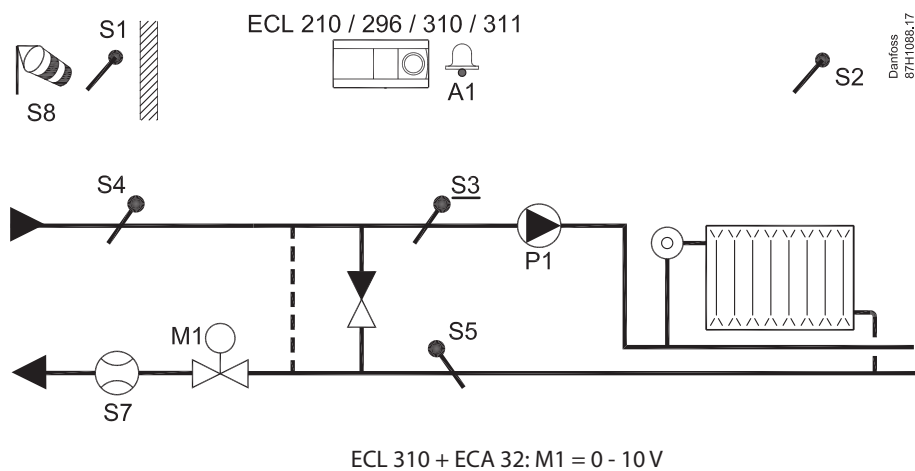


A230.1 ex. c:

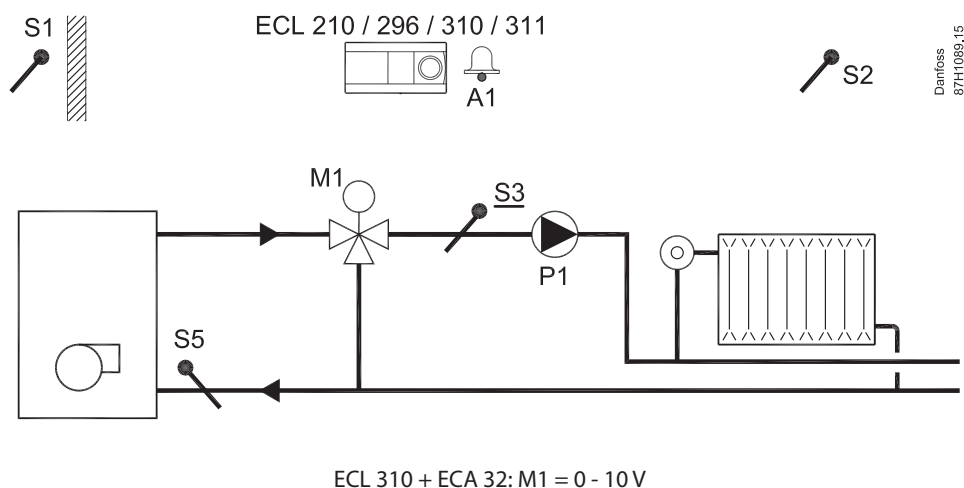 


A230.1 ex. d:

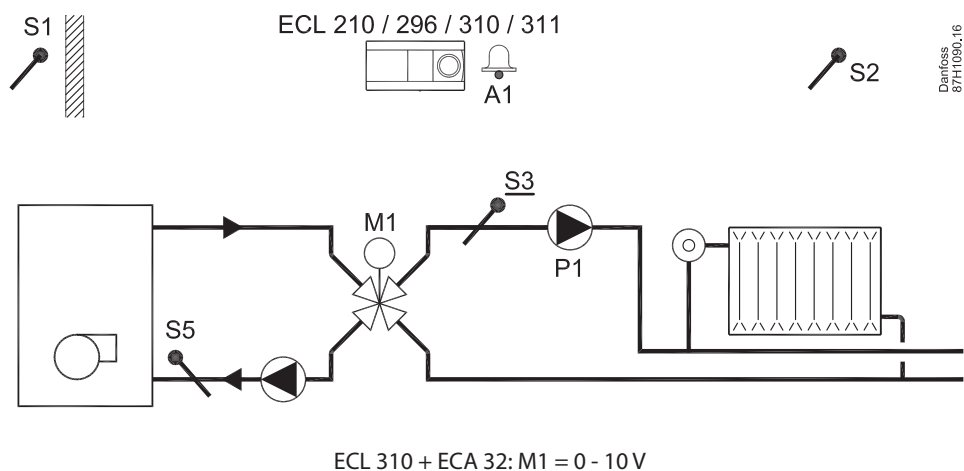 


**A230.2 ex. a:**

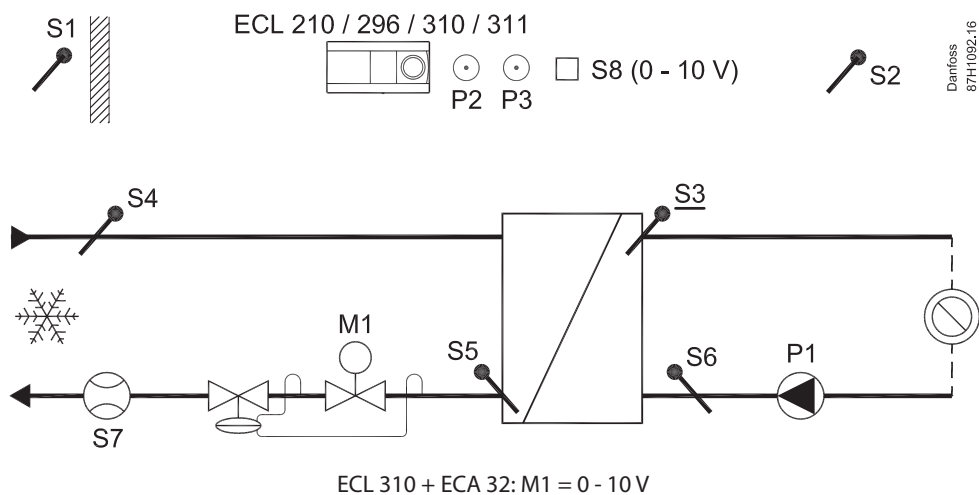 


**A230.2 ex. b:**

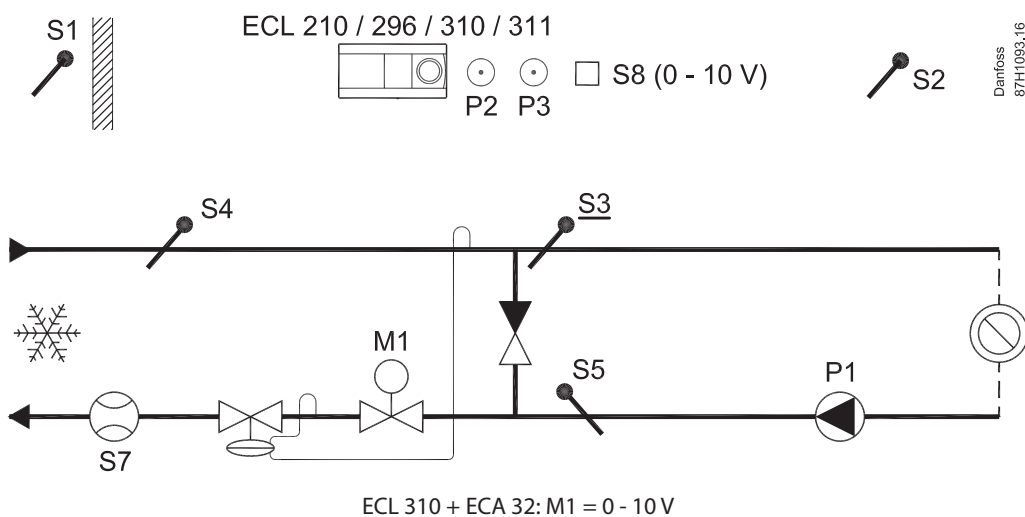 


**A230.2 ex. c:**

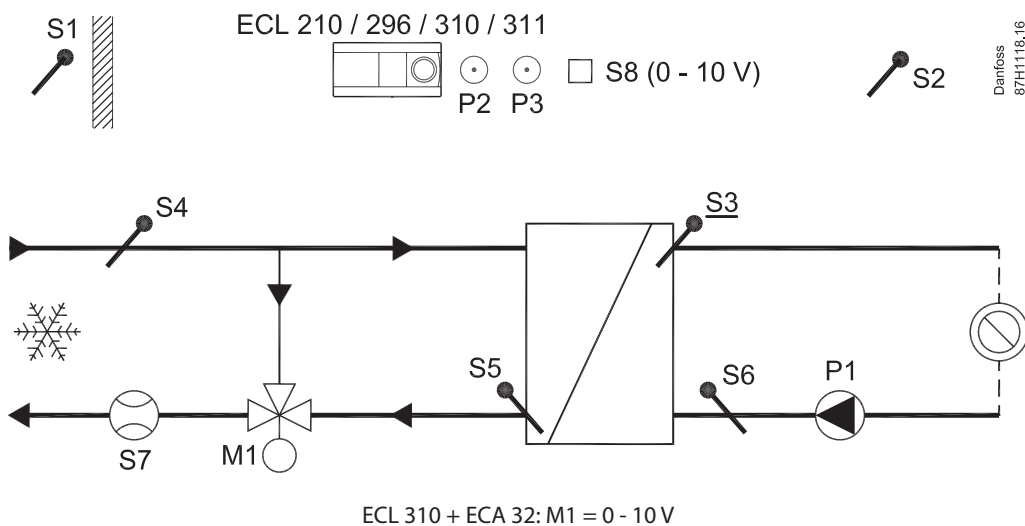 

A230.2 ex. d:

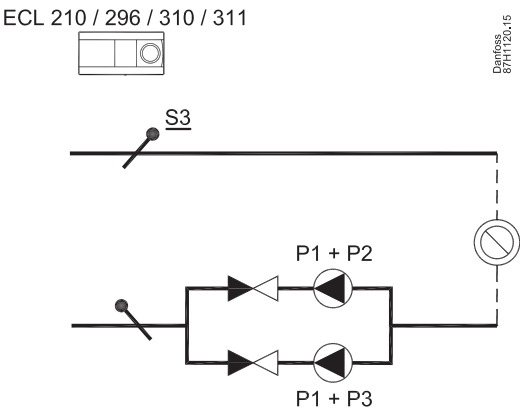 


A230.3, ex. a

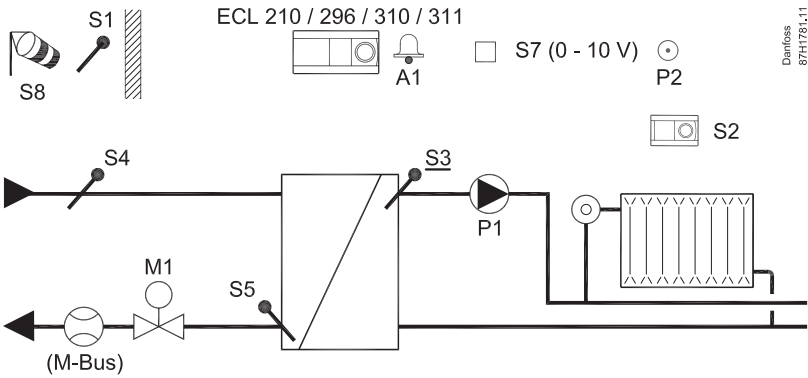 


ECL 310 + ECA 32: M1 = 0 - 10 V

 A230.3, ex. b

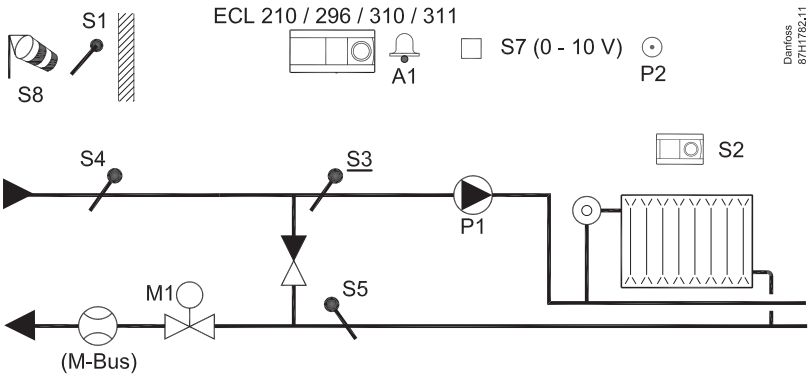


ECL 310 + ECA 32: M1 = 0 - 10 V

**A230.3, ex. c**

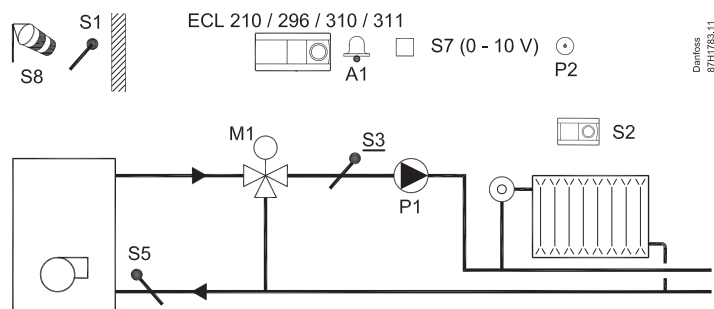 


ECL 310 + ECA 32: M1 = 0 - 10 V

**A230.3, ex. d**

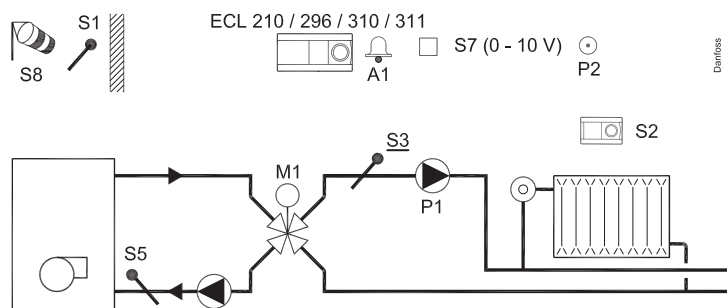 


ECL 310 + ECA 32: M1 = 0 - 10 V

**A230.4, ex. a**

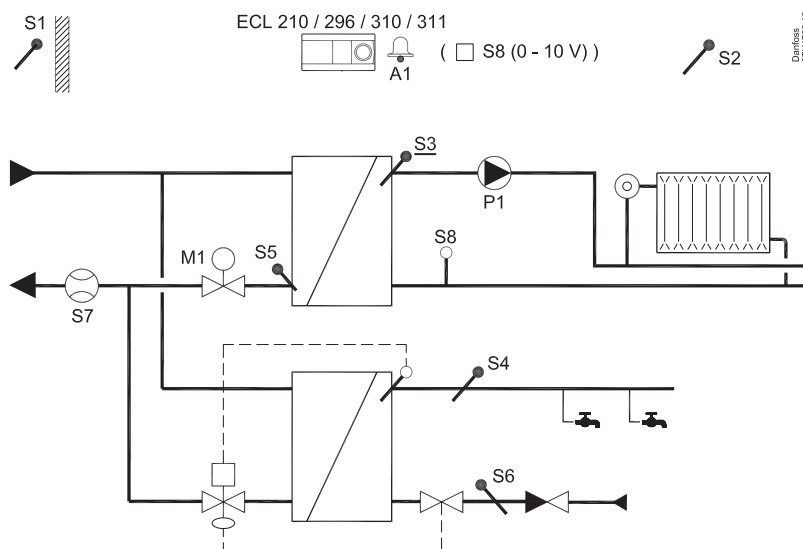 


ECL 310 + ECA 32: M1 = 0 - 10 V


**A230.4, ex. b**

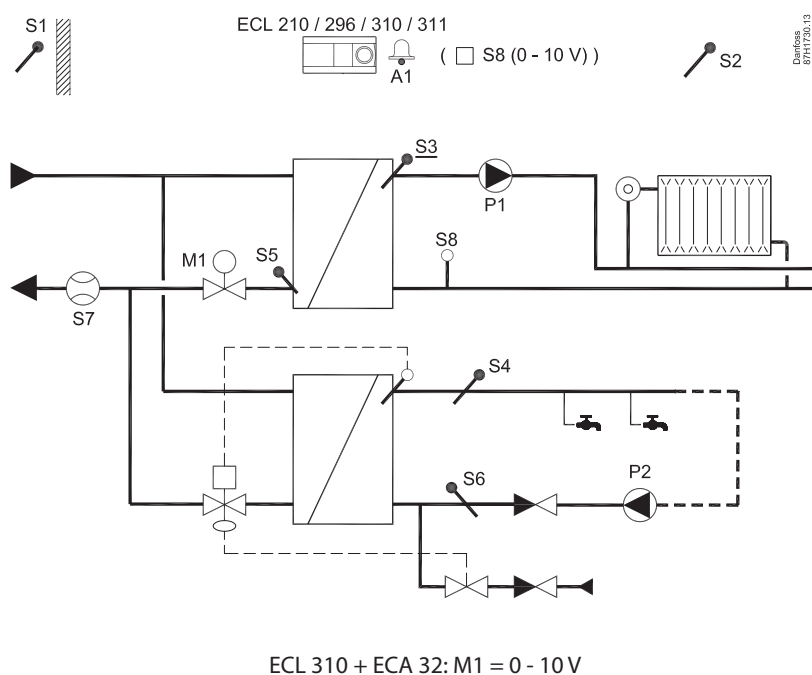 


**A230.4, ex. c**

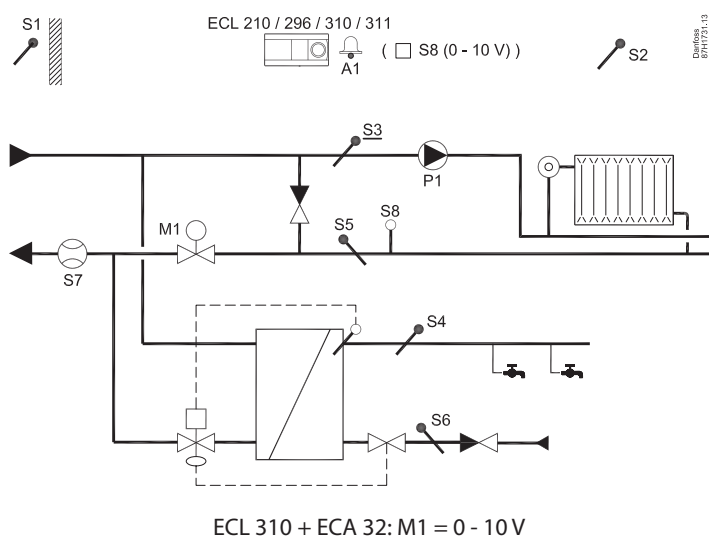 

**A230.4, ex. d**

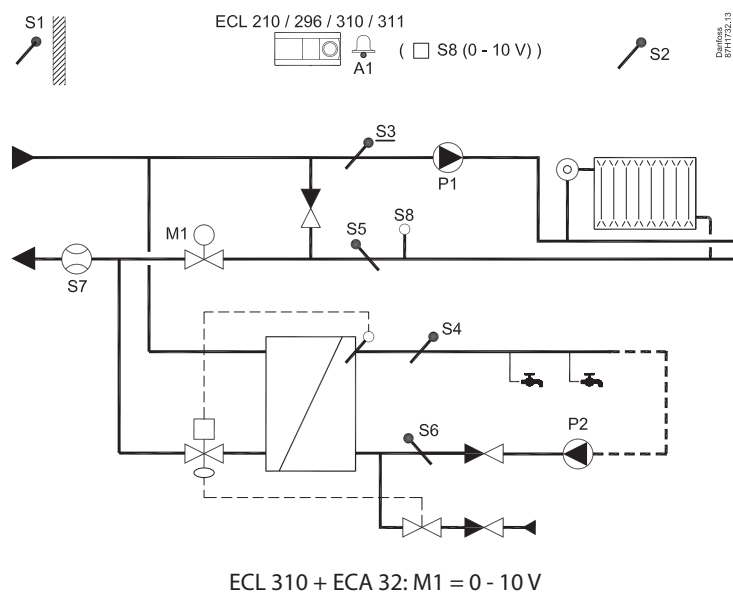 


**A230.5, ex. a**

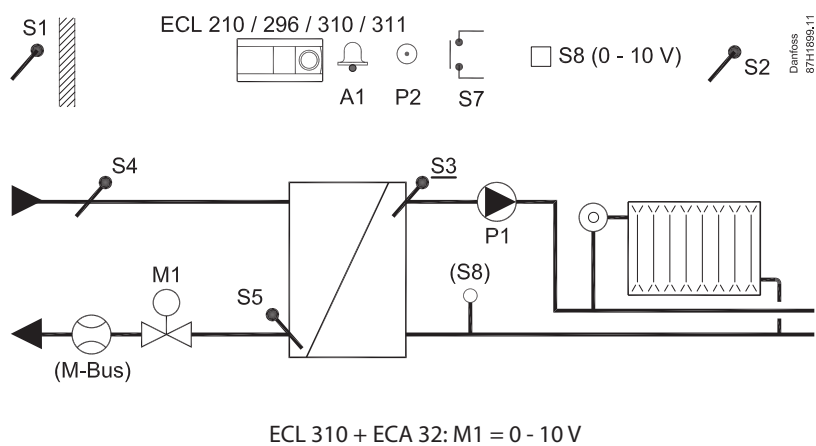 


A230.1, A230.3, A230.5  
S4, S5



 A:

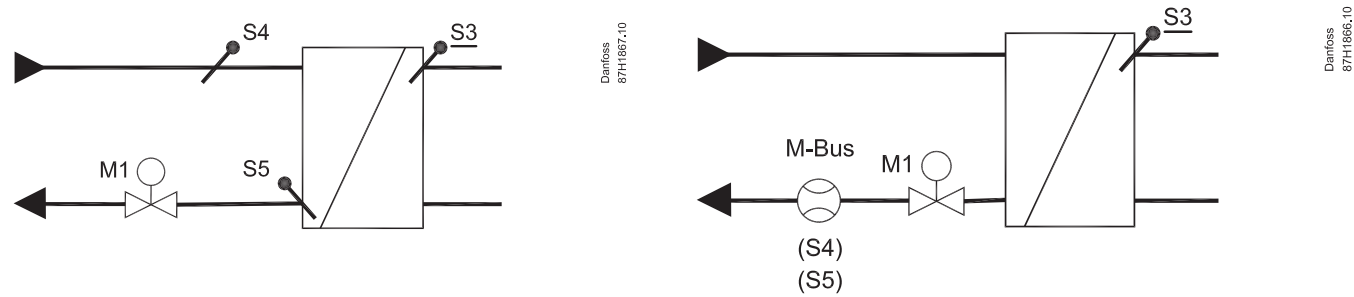


B:

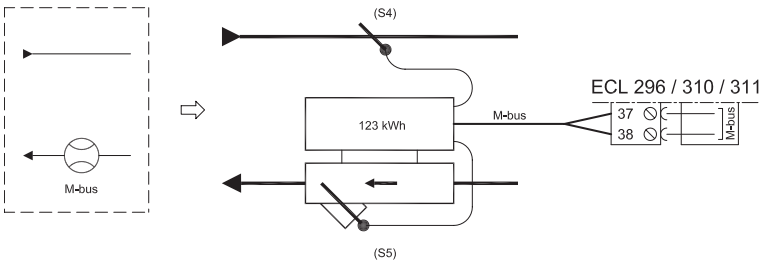 


ECL Comfort 210 / 296 / 310:  
230 V a.c.

|    |                      |
|----|----------------------|
| R  | 4 (2) A / 230 V a.c. |
| R  |                      |
| Tr | 0,2 A / 230 V a.c.   |

 ECL 210 / 310:

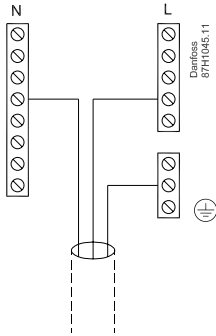


**ECL 296:**

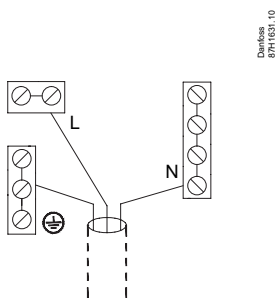 


|               | R1 | R2   | R3   | R4     |
|---------------|----|------|------|--------|
| <b>A230.1</b> | P1 | (P2) |      | A1 (🔔) |
| <b>A230.2</b> | P1 | (P2) | (P3) |        |
| <b>A230.3</b> | P1 | (P2) |      | A1 (🔔) |
| <b>A230.4</b> | P1 | (P2) |      | A1 (🔔) |
| <b>A230.5</b> | P1 | (P2) |      | A1 (🔔) |

**230 V a.c.**

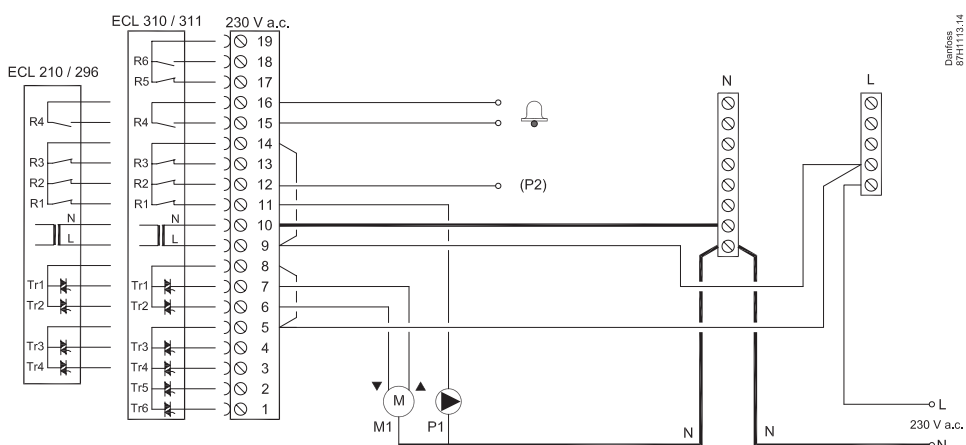 


**230 V a.c.**

 **(Danfoss thermo-actuator ABV)**

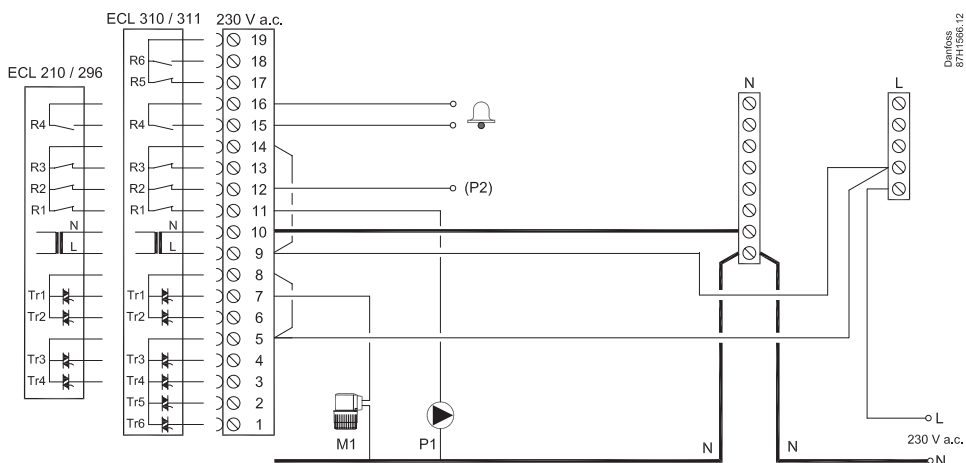


# **ECL 310 + ECA 32**

 
**M1 = V1 (0 - 10 V)**

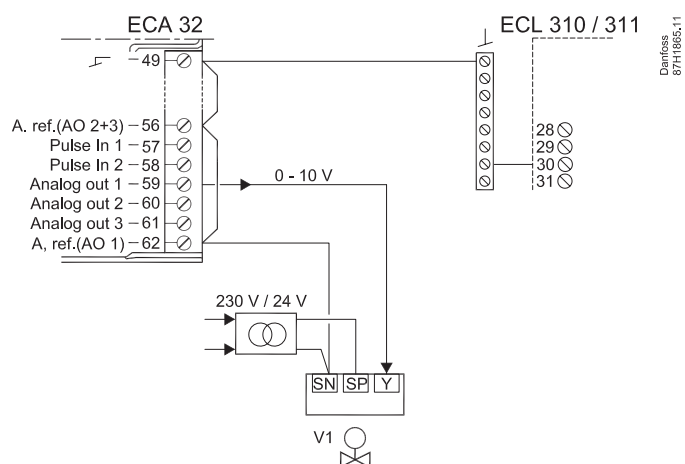

# **A230.2, P2 + P3**

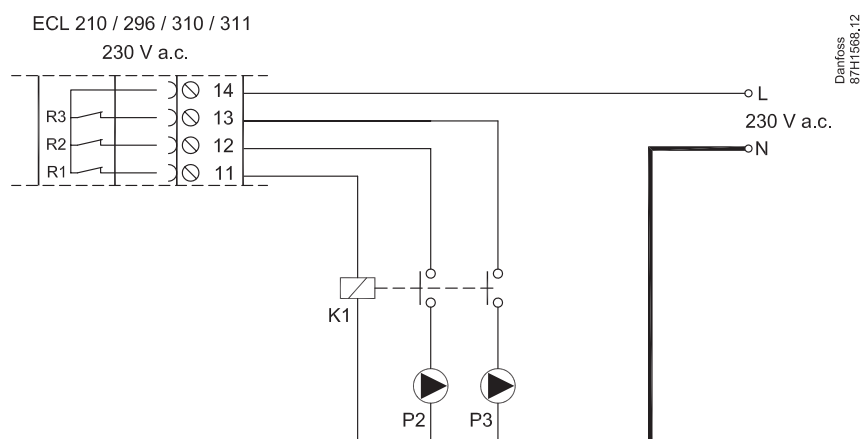 


**ECL Comfort 296:**  
**230 V a.c.**

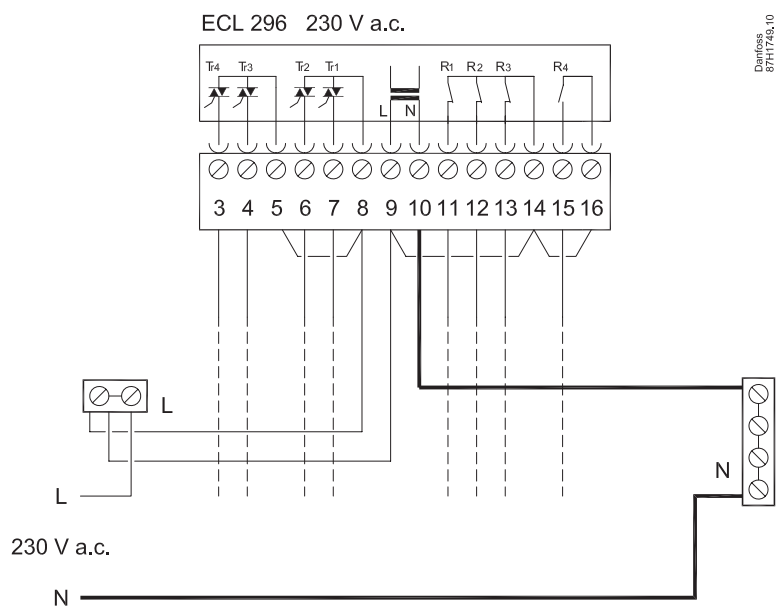 

**ECL Comfort 310:**  
**24 V a.c.**

|    |                     |
|----|---------------------|
| R  | 4 (2) A / 24 V a.c. |
| Tr | 1 A / 24 V a.c.     |

**24 V a.c.**

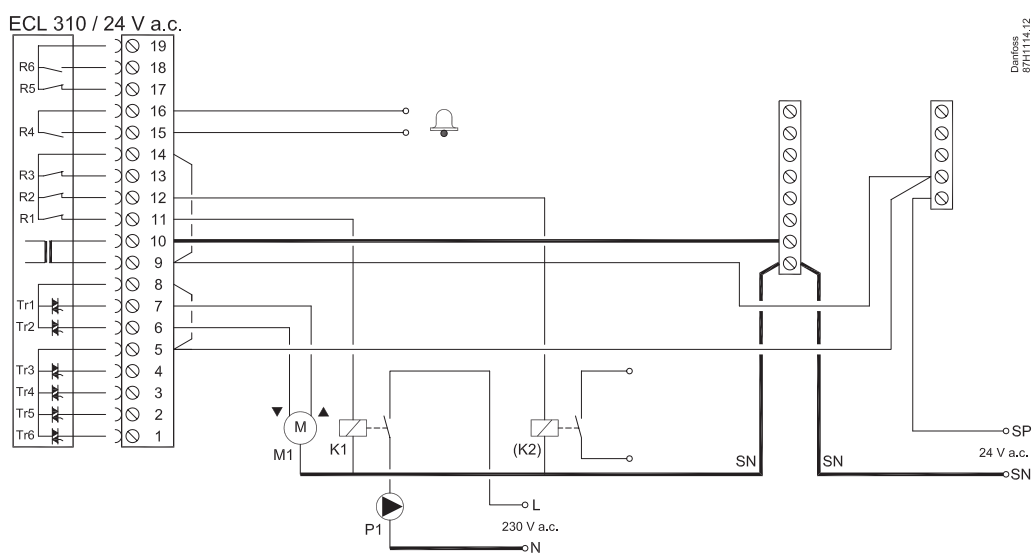 


The diagram shows the following components and their connections:


- 230 V a.c. Supply:** Connected to a pump (P1) and a terminal block (SN).
- 24 V a.c. Supply:** Connected to a terminal block (SN) and a bell (A1).
- Relay (K1):** Connected to the 230 V a.c. supply and the 24 V a.c. supply.
- Switch (K2):** Connected to the 230 V a.c. supply and the 24 V a.c. supply.
- Motor (M1):** Connected to the 230 V a.c. supply.
- Bell (A1):** Connected to the 24 V a.c. supply.
- Terminal Block (SN):** A common terminal block for the 24 V a.c. supply, connected to the bell (A1) and the relay (K1).

Wiring diagram for the ECA 32 and ECL 310 / 311 modules. The ECA 32 module has terminals for A. ref. (AO 2+3) - 56, Pulse In 1 - 57, Pulse In 2 - 58, Analog out 1 - 59, Analog out 2 - 60, Analog out 3 - 61, and A. ref. (AO 1) - 62. The ECL 310 / 311 module has terminals for 28, 29, 30, and 31. A 230 V / 24 V transformer is connected to the ECA 32 module, with its secondary winding connected to the SN and SP terminals of a terminal block. The Y terminal of the terminal block is connected to the 0 - 10 V output of the ECA 32 module. A ground symbol is connected to the A. ref. (AO 1) - 62 terminal.


**A230.2, P2 + P3**

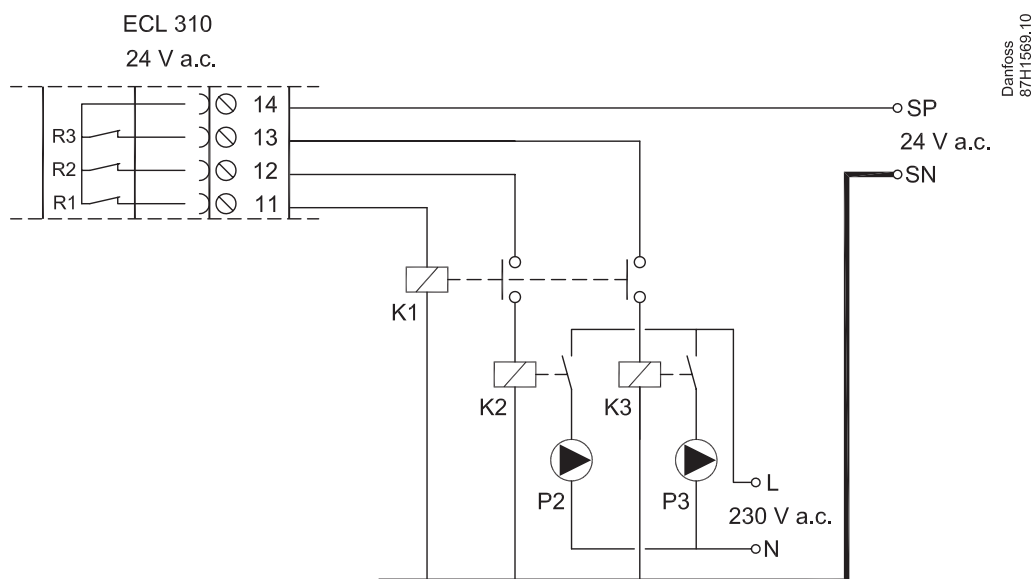 

 
**230 V a.c. / 24 V a.c. , safety thermostat  
1-step closing**

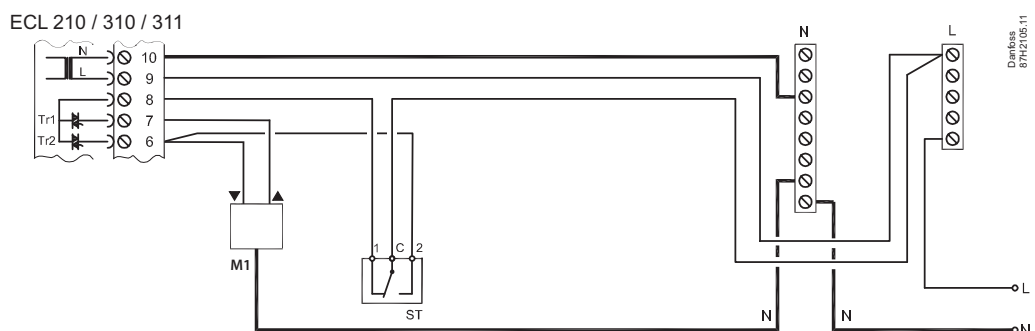


 
**230 V a.c. / 24 V a.c. , safety thermostat  
1-step closing**

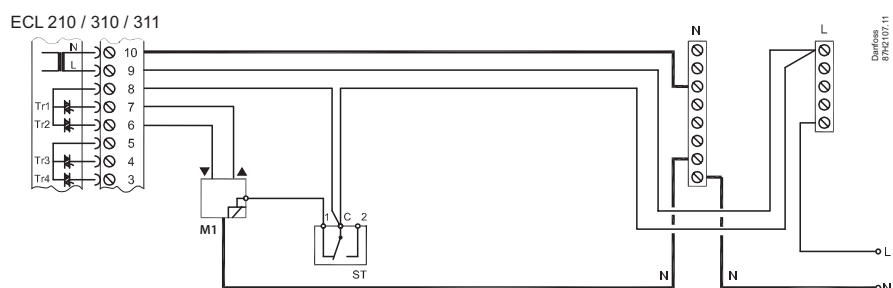

 230 V a.c. / 24 V a.c. , safety thermostat  
2-step closing

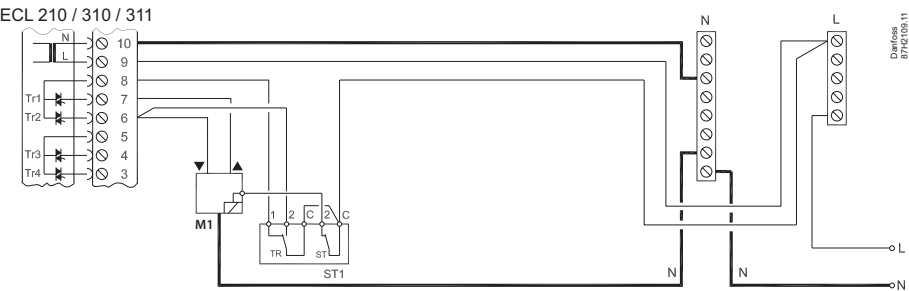

 Pt 1000 (1000 Ω / 0 °C)

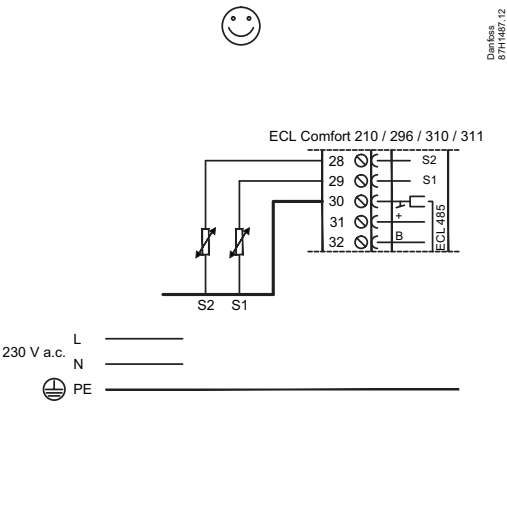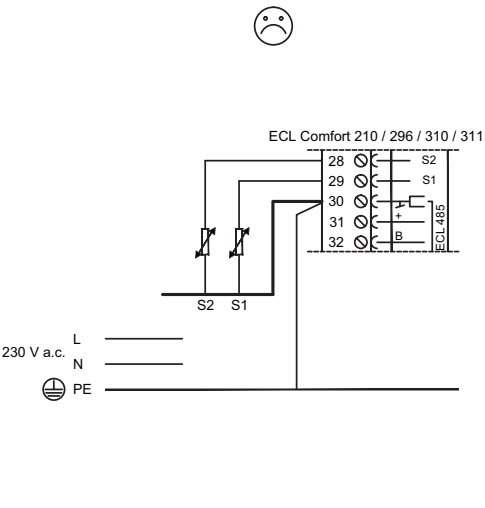  

 Pt 1000 (1000 Ω / 0 °C)  
ECL 210 / 296 / 310

|        | S1 | S2  | S3 | S4 | S5 | S6 | S7 | S8 |
|--------|----|-----|----|----|----|----|----|----|
| A230.1 | x  | x   | x  | x  | x  |    |    |    |
| A230.2 | x  | x   | x  | x  | x  | x  |    |    |
| A230.3 | x  | (x) | x  | x  | x  |    |    |    |
| A230.4 | x  | x   | x  | x  | x  | x  |    |    |
| A230.5 | x  | x   | x  | x  | x  |    |    |    |


Pulse 

|        | S7 |
|--------|----|
| A230.1 | x  |
| A230.2 | x  |
| A230.3 |    |
| A230.4 | x  |
| A230.5 |    |

0 - 10 V

|        | S7              | S8                                                                                                                                                                                             |
|--------|-----------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A230.1 |                 | 0 - 10 V ⇒                                                                                                    |
| A230.2 |                 | 0 - 10 V ⇒  S3 (x °C!)                                                                                        |
| A230.3 | 0 - 10 V ⇒ % RH | 0 - 10 V ⇒                                                                                                    |
| A230.4 |                 |  /<br>0 - 10 V ⇒  S3 (x °C!) |
| A230.5 |                 |  /<br>0 - 10 V ⇒  S3 (x °C!) |

 
A230

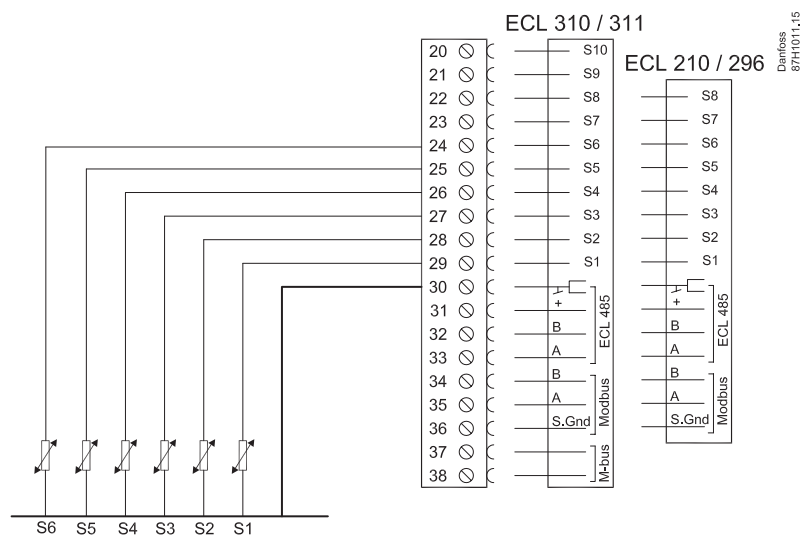

A230.1, A230.2, A230.4



 S7

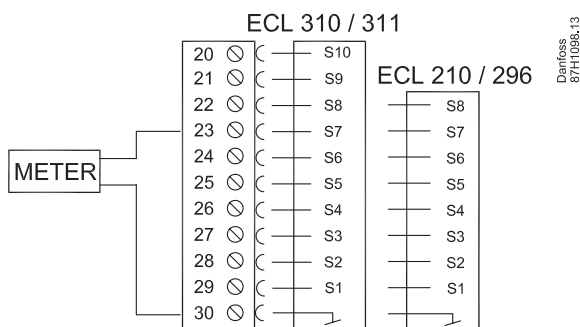

A230.1, A230.2, A230.4

 


S7




A / B ?


A:

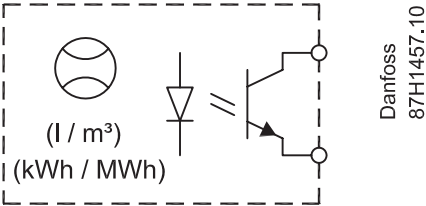


B:

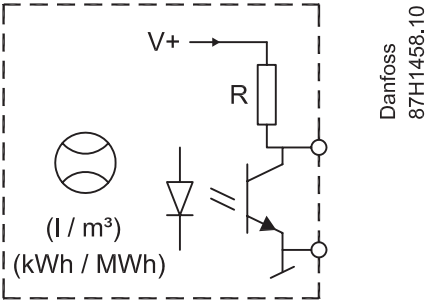 

A:

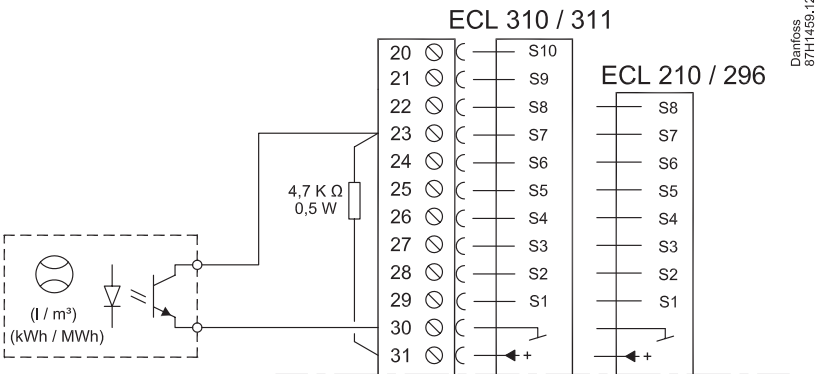 


B:

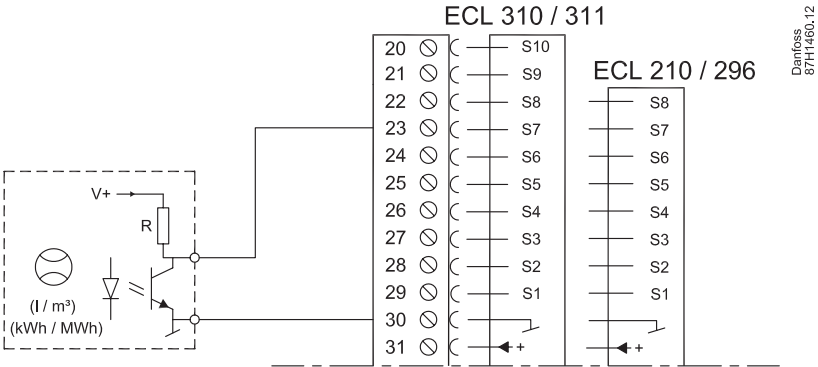 

## A230.5

 
### S6

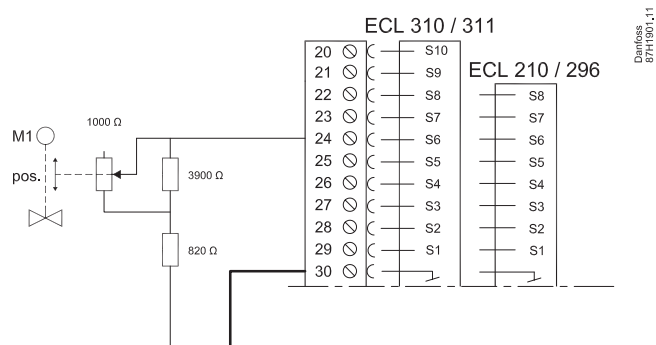

## A230.5



 
### S7

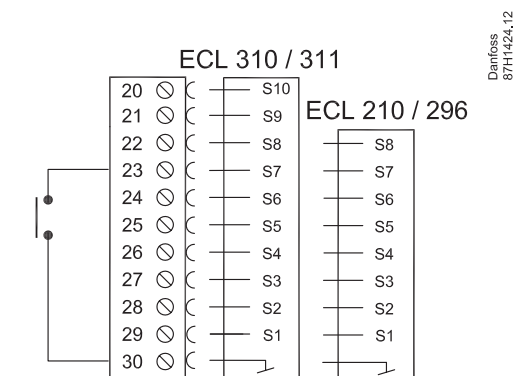


## A230.1, A230.3



 
### S8

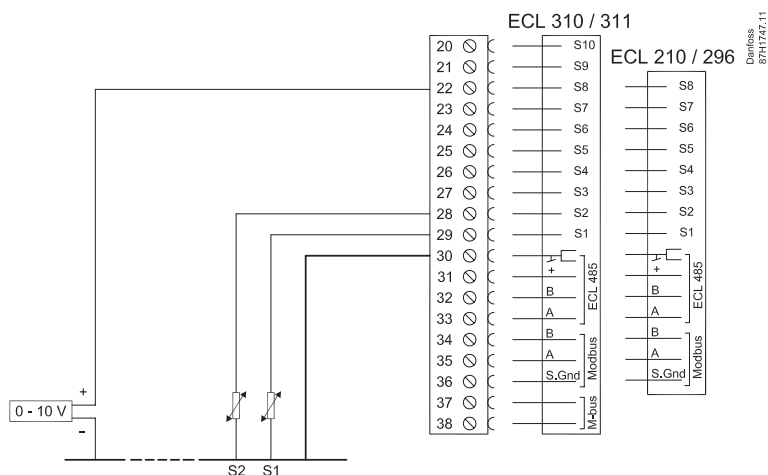


A230.2  
0 – 10 V

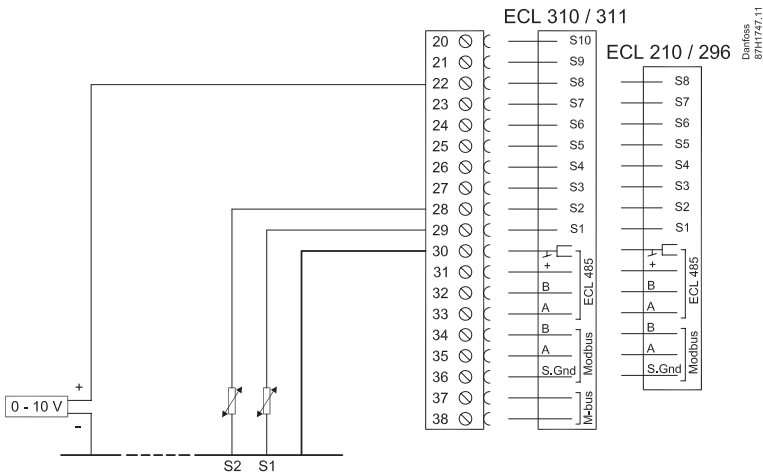 


A230.4, A230.5

 

S8

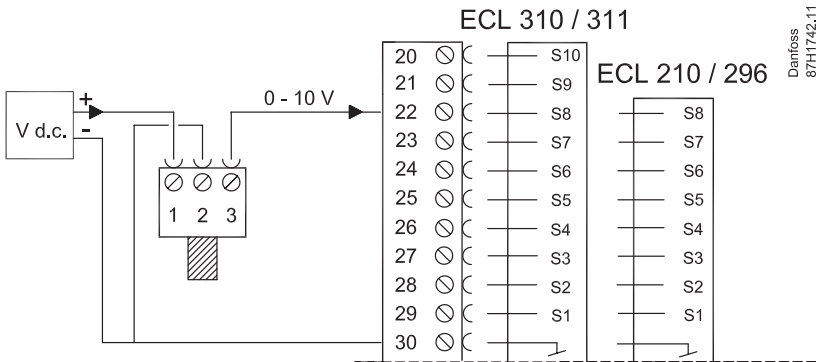 


**A230.1, A230.2, A230.3, A230.4, A230.5**

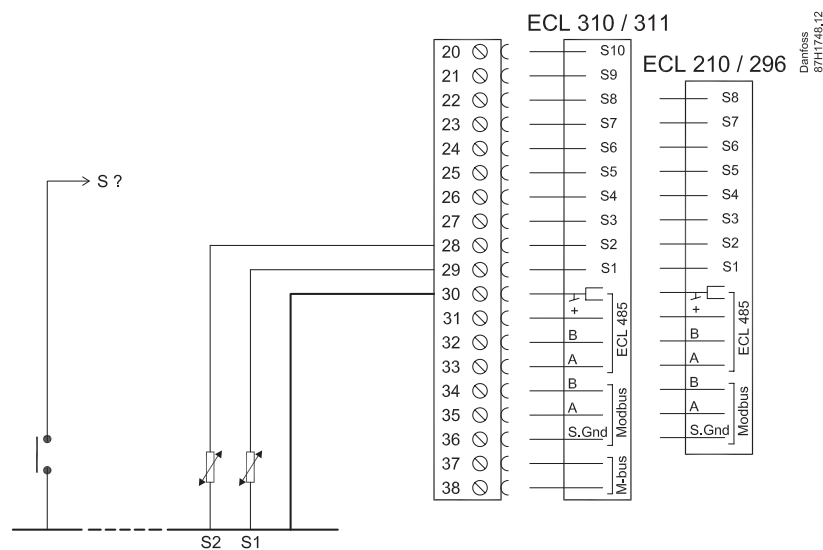 


?  
 ECL 210 / 296: S7 - S8  
 ECL 310: S7 - S10  
 ECL 310 + ECA 32: S7 - S16


**ECA 30 / 31**

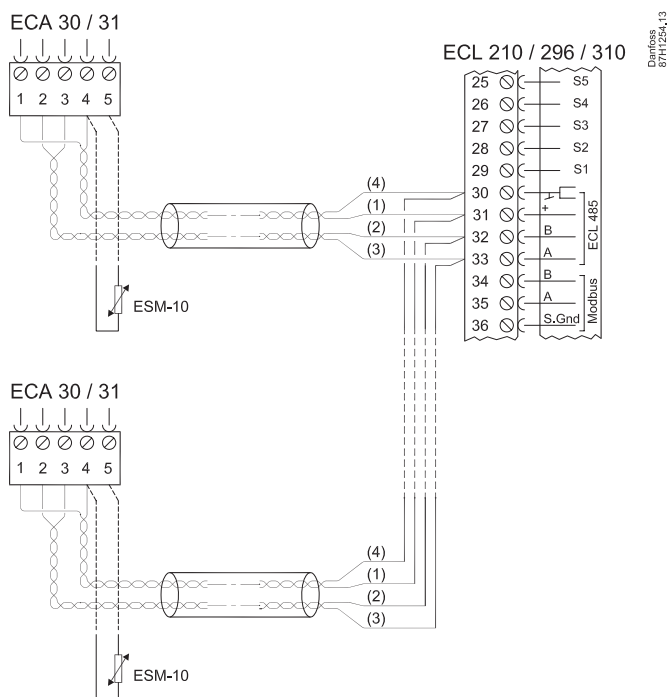 


Master / slave

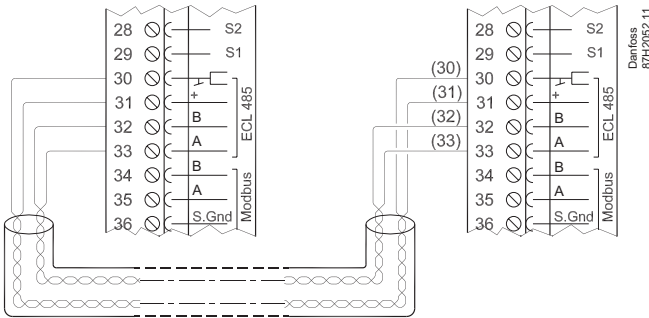 


Modbus

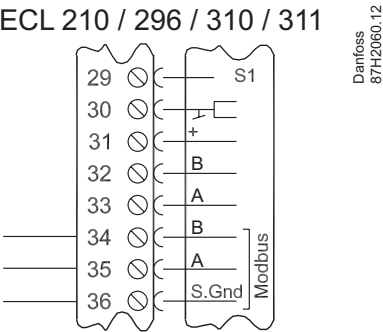 



M-bus

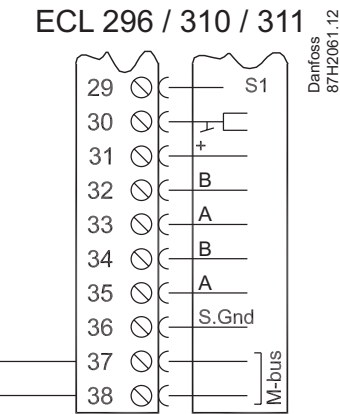 

M-bus

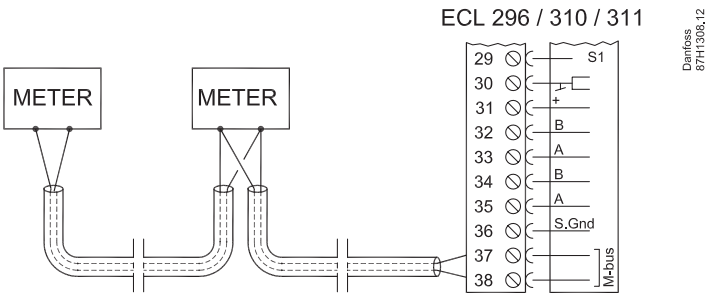 


  Pt 1000 (IEC 751B, 1000  $\Omega$  / 0 °C)

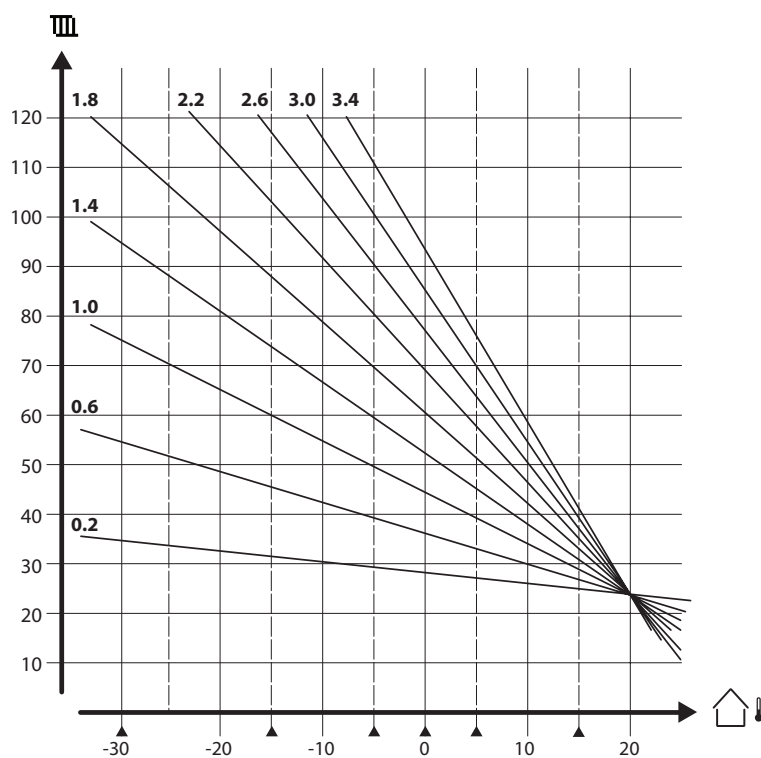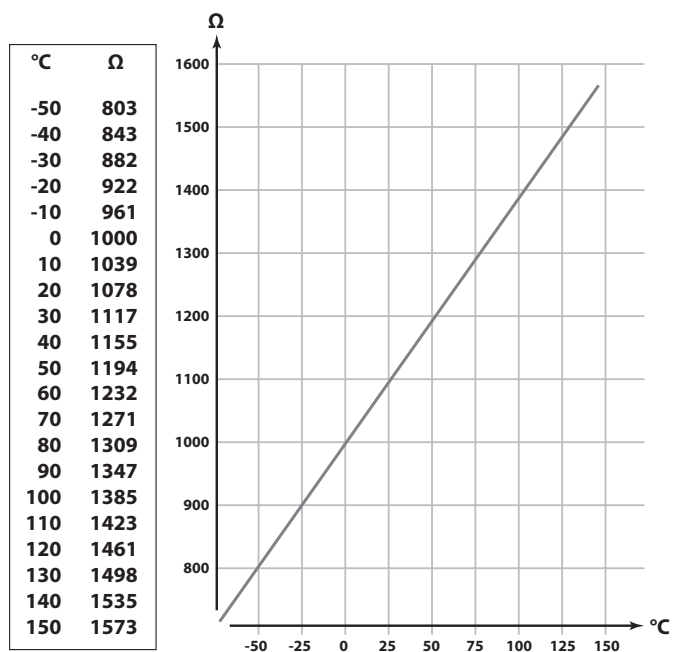


ECA 30

 
1

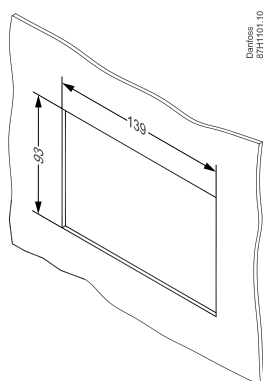


2

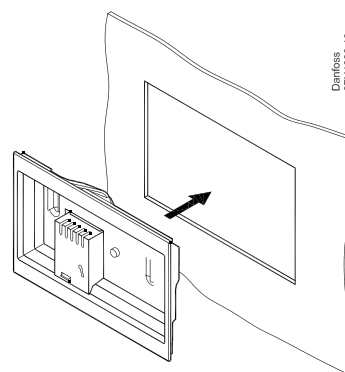 


3

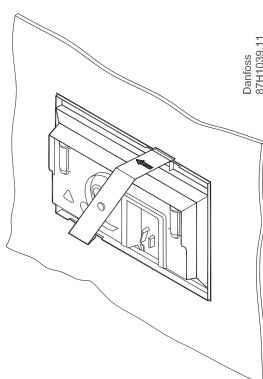 


4

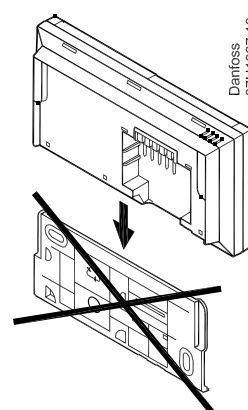 


5

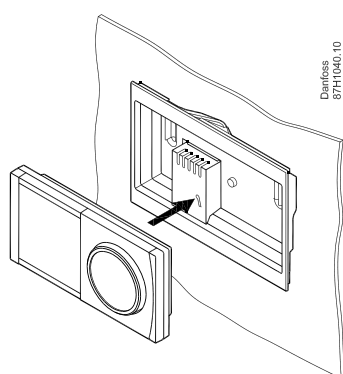 


6

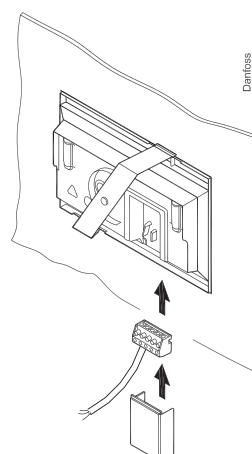 

7

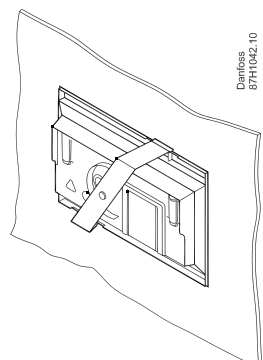 


8

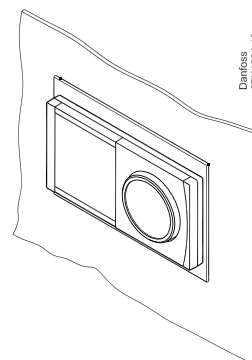 




# Installation Guide, ECL Comfort 210 / 296 / 310, A230


Danfoss  
87H1021.11

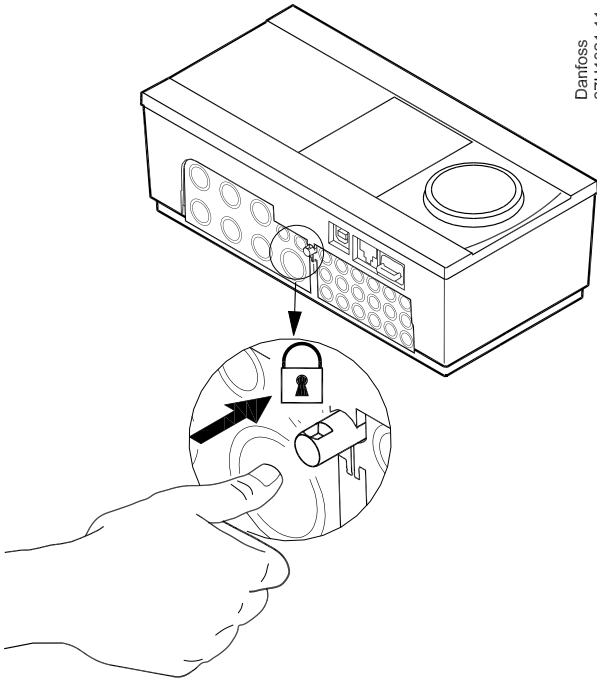


Danfoss  
87H1017.11

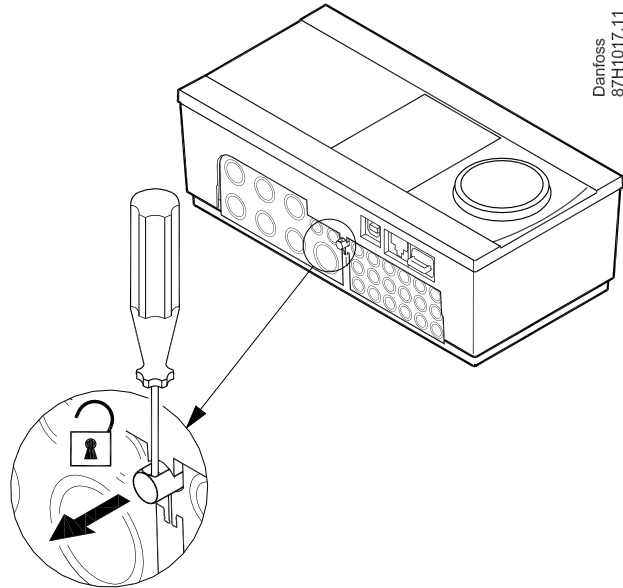 

Danfoss  
87H1073.11

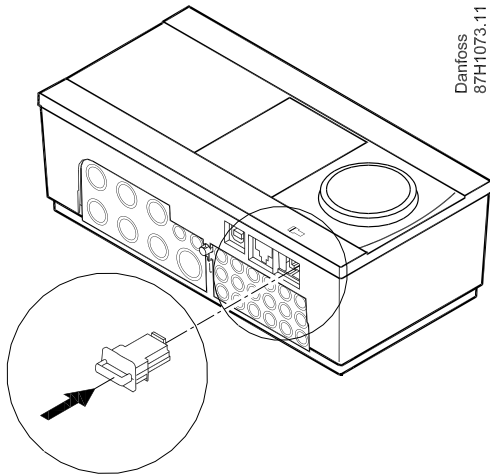 

Danfoss  
87H1074.11

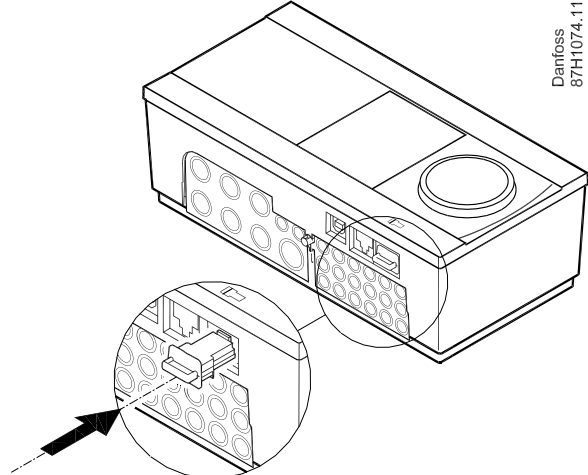 

?  **ECL Comfort 210 / 296 / 310, A230: [www.danfoss.com](http://www.danfoss.com) or [store.danfoss.com](http://store.danfoss.com)**

?  **<https://www.youtube.com/user/DanfossHeating>  
-> Playlists -> How-to Videos -> District Energy installation videos**



**Danfoss A/S**  
Climate Solutions • [danfoss.com](http://danfoss.com) • +45 7488 2222



Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.  
All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.